

1 插好 gm 卡 (insert gm card well)




2


插好自检头开机(insert connector well and turn on it) Very Important




3 进入菜单选择 f4 tool options (enter menu to choose f4 tool options )

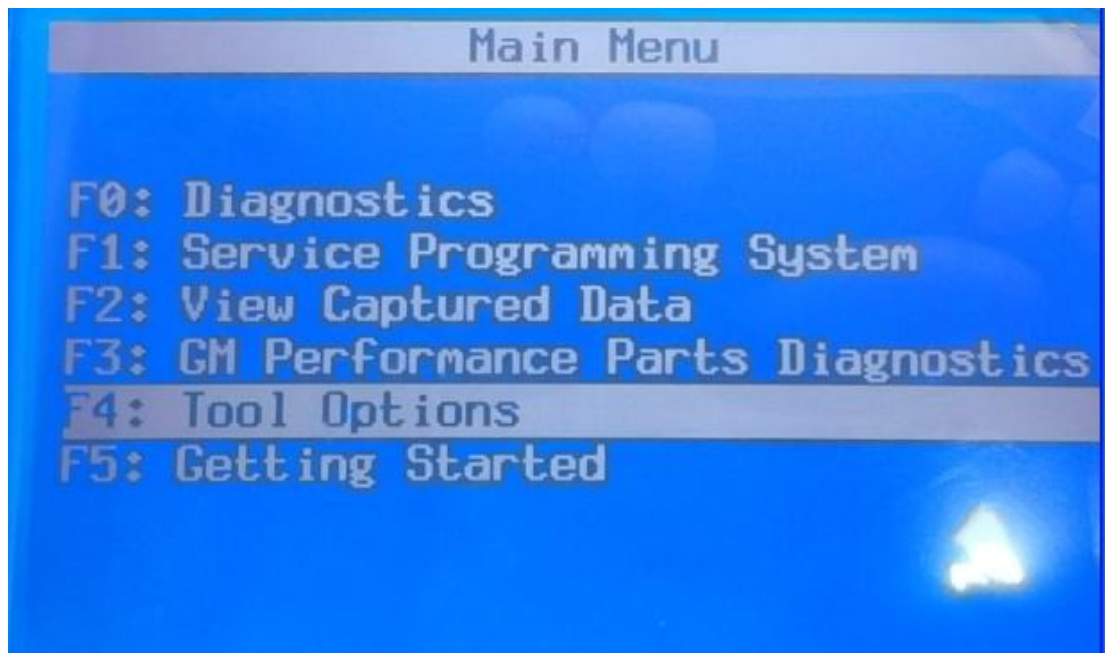


4 选择 f3 自检 self test (choose f3 self test)

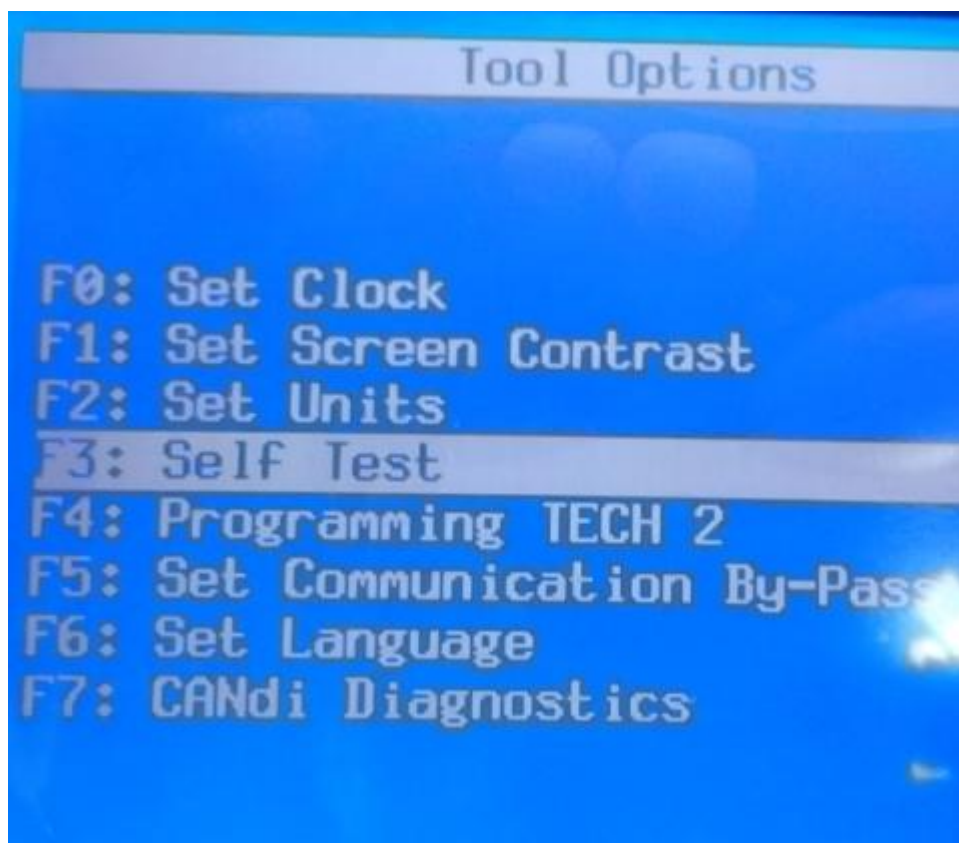


5 屏幕提示退出(screen shows to exit)

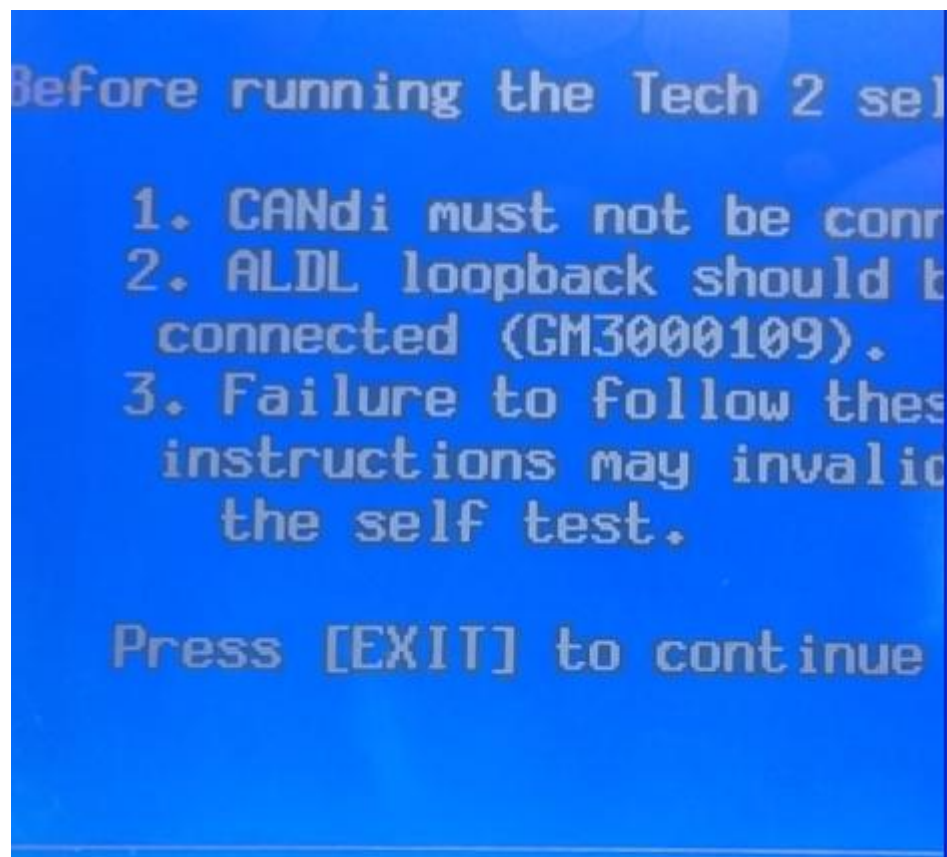

6 选择自检功能(choose self test function)

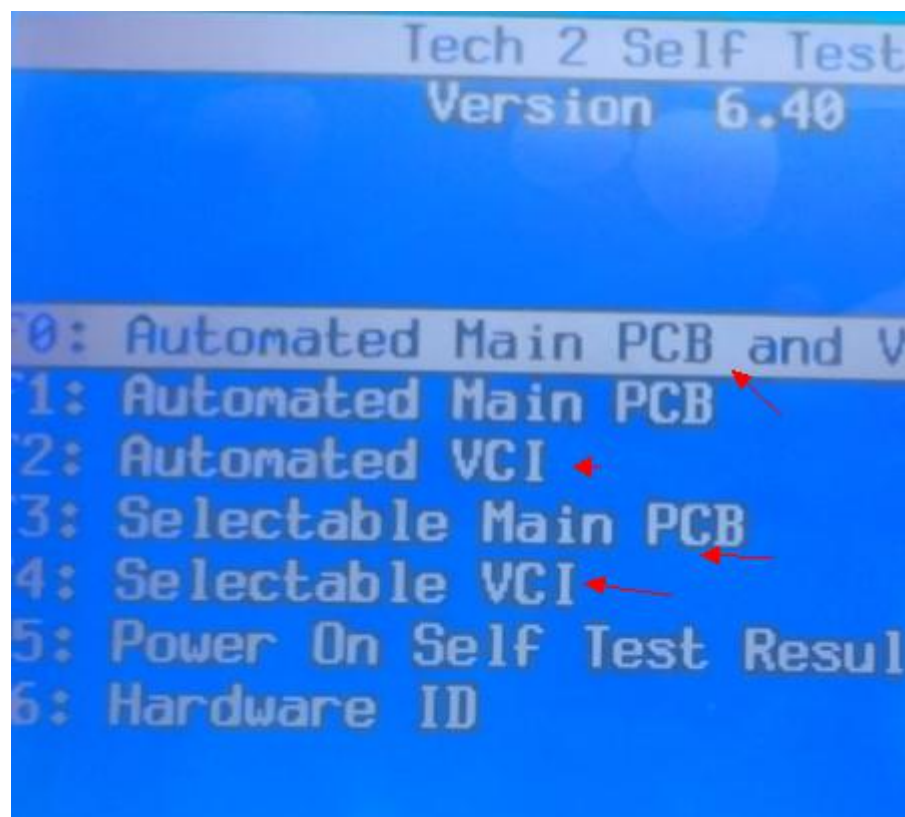

7vci 自检(vci self test)

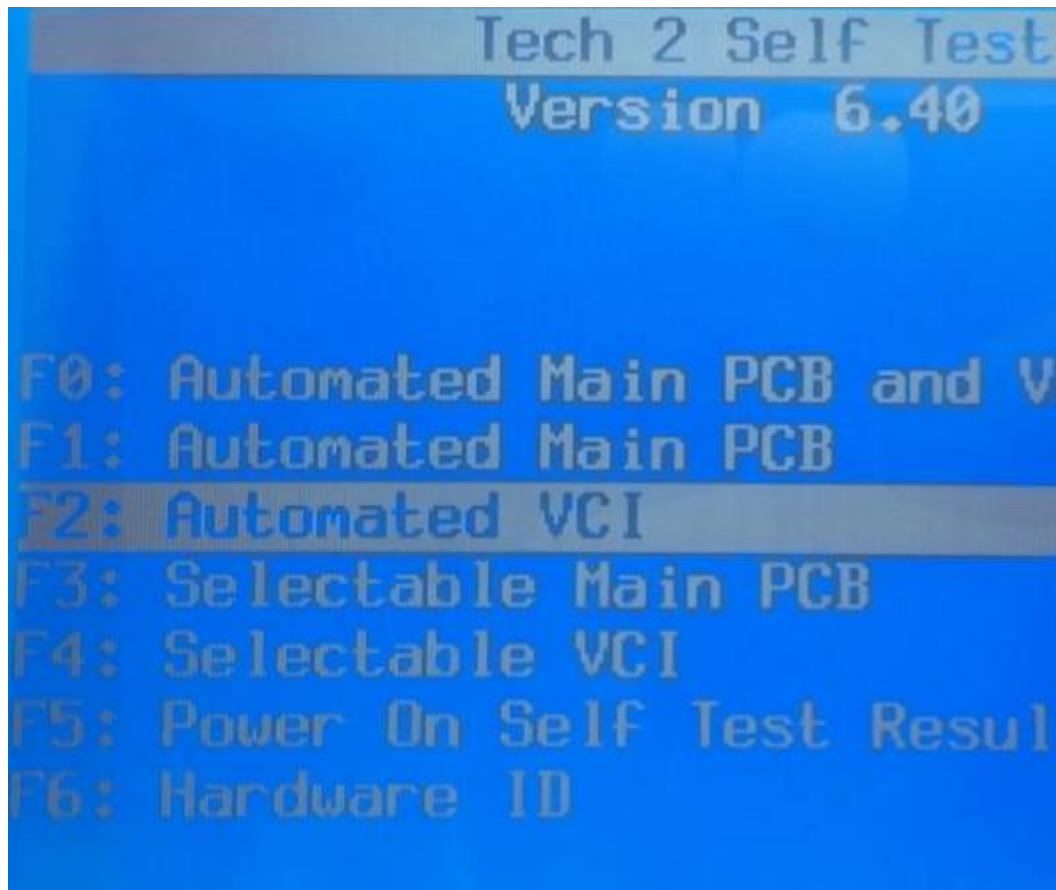

8vci 自检结果(self test result)

